

# Wheelchair shopping trolley

Better service for people with disabilities



# Wheelchair shopping trolley

*Less strain and better service for people with disabilities*

- > *Universal attachment mechanism*
- > *Mobile and independent shopping – no restrictions*
- > *Can be nested to save space*



**WHEELCHAIR SHOPPING TROLLEY 90**  
With attachment mechanism as standard



Attachment mechanism

**WHEELCHAIR SHOPPING TROLLEY 40**  
With attachment mechanism as standard



**VERIFIED QUALITY: "GENERATION-FRIENDLY SHOPPING"**  
This special Wanzl shopping trolley is a real bonus when applying for this seal of approval.

**Ausgezeichnet** ✓  
Generationenfreundlich



Pat. pend.



## Two designs

Wheelchair shopping trolleys users are available with a 40- or 90-litre shopping basket depending on your product range.



## Space-saving

Low nesting depth of 230 mm per trolley for minimum space requirements.



# Wheelchair shopping trolley

■ **The shopping trolley for wheelchair users** was developed over the course of one year in close collaboration with various groups of wheelchair users. This service from Wanzl enables you to offer disabled customers the same high quality service as other store users.

## Simple attachment

**Suitable for use** with various types of wheelchairs (electrical and mechanical). The trolley and wheelchair form a fixed unit once attached.



## Integrated poster frame

**A5 format**, made of plastic, with clear instructions for use.



## Plastic bumper rail

**Protects** the shopping trolley and shop fittings from damage.



## Bag hook and bottle holder

Metal bag hook and holder for two bottles **as standard** in 40-litre basket.



## Small items wire basket

**Practical accessories** with high-gloss galvanised, chrome plating – extra narrow mesh. W 320 x D 130 x H 70 mm.






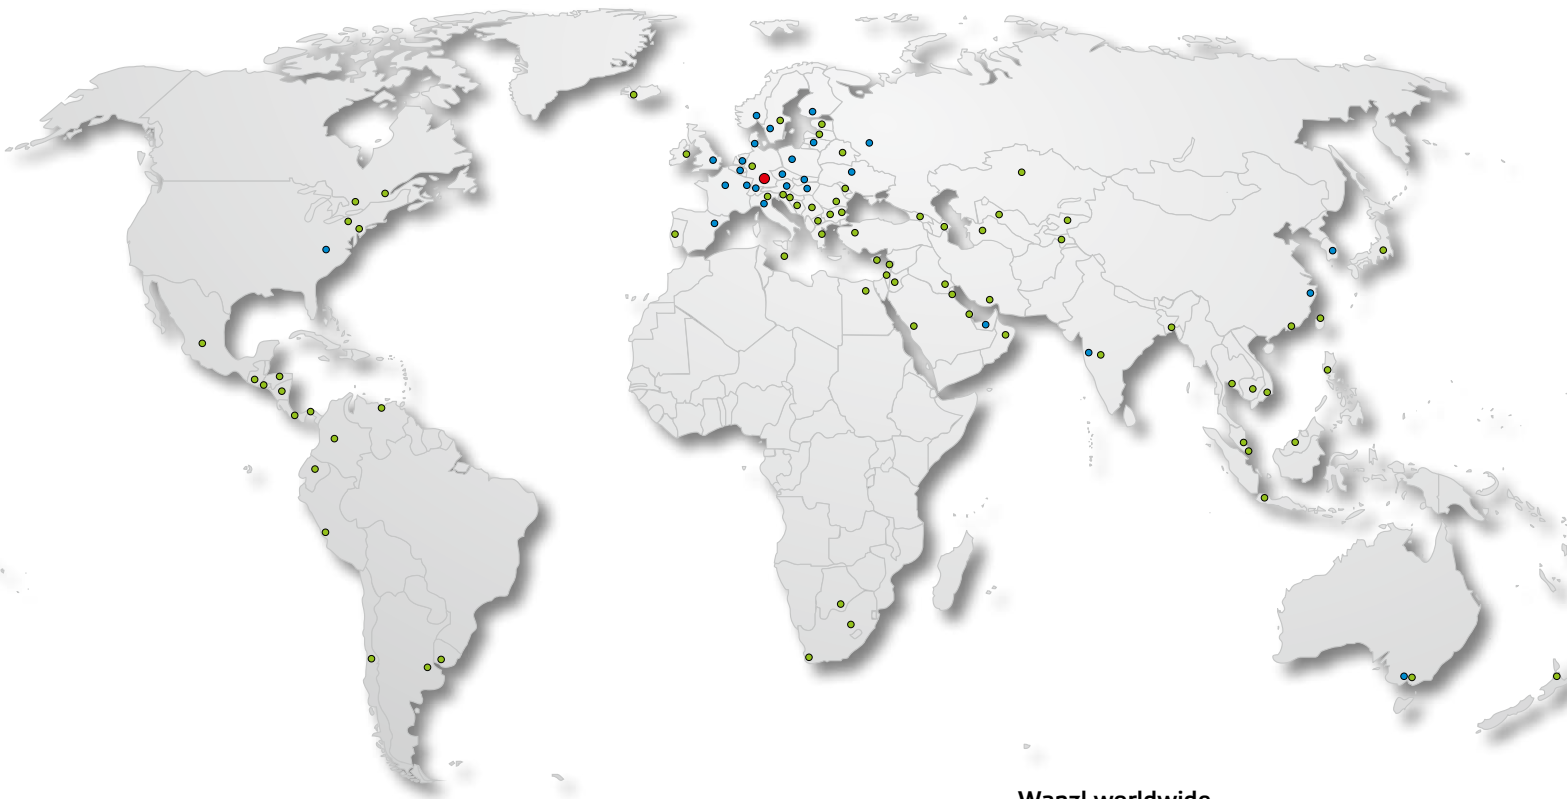
## Standard design

Stable chassis made from round tube and flat steel. Sturdy, narrow-meshed basket with icons. Basket flap with integrated poster frame and operating instructions. Flexible attachment mechanism, fits all conventional mechanical and electrical wheelchairs.

**Surface finish:** High-gloss galvanised and chrome-plated with baked-on plastic paint protection.

**Castor wheels:** Original Wanzl castors, 125 mm diameter, rubber tread, deflector rings to protect the trolley and store fittings.

Wheelchair shopping trolley	40	90
		
	<b>Prod. No.</b>	<b>Prod. No.</b>
Plastic powder coating	02.17063.51-0000	02.08928.51-0000
A x B x C, length x width x height (mm)	793 x 865 x 959	793 x 865 x 1056
Nesting depth in a row (mm)	275	275
Basket volume (litres) / load capacity (kg)	40/40	90/90
Castor diameter (mm)	125	125
<b>Accessories</b>		
Advertising handle	01.31599.00-0000	01.95991.00-0000
Wanzl Box Classic R coin deposit system	On request	On request
Holder for Wanzl Box Classic R	On request	On request
Small items wire basket	01.28589.51-0000	On request



**Wanzl worldwide**

- Head Office
- Subsidiaries
- Partners



**GERMANY**

Wanzl GmbH & Co. KGaA  
Rudolf-Wanzl-Straße 4  
89340 Leipheim

Phone +49 (0) 82 21 / 729-0  
Fax +49 (0) 82 21 / 729-1000

info@wanzl.com  
www.wanzl.com

**GREAT BRITAIN**

Wanzl Ltd.  
Europa House  
Heathcote Lane  
Warwick CV34 6SP

Phone +44 (0) 1926 / 45 1951  
Fax +44 (0) 1926 / 45 1952

enquiries@wanzl.co.uk  
www.wanzl.com

**AUSTRALIA**

Wanzl Australia Pty. Ltd.  
97 Highbury Road  
BURWOOD VIC 3125

Phone +61 (0) 3 / 98 08 22 99  
Fax +61 (0) 3 / 98 08 22 66

info.au@wanzl.com  
www.wanzl.com