

Caroline's Cart™

A shopping cart for seniors and those with special needs.



Cart Features

EASY TO USE

Fixed, open handles provide easy access to the seat.

COMFORT & SAFETY

A comfortable seat specially designed for customers with low muscle tone, plus an adjustable 5-point locking harness, guarantees increased safety.

SPACIOUS

Large basket provides ample room for merchandise

Seat capacity: 35lbs - 250lbs

STABILITY

Locking back brake

Front locking wheels assure stability while being seated or helping the passenger out of the seat.



Promoting Inclusion, Accomodation, and Accessible Shopping.



Benefits



1 Easy to Use and Clean

The fixed, open handles of Caroline's Cart provide convenient access to the seat. Easy to keep clean.

2 Spacious


The cart features an ample cargo basket that provides space for purchased items.

3 Comfort & Safety

The specialized, patented seat is contoured to be comfortable for individuals with low muscle tone and features an adjustable 5-point latching safety harness that secures the occupant so the caregiver has hands free to steer the cart. The cart has an occupant capacity from 35 to 250 lbs. Additionally, the seat faces the caregiver so eye contact is easy to maintain.

4 Stability

A locking brake in back and front locking castors provide stability when loading and unloading occupants. Steel frame and components standard with Granite TECH-SEAL® only.

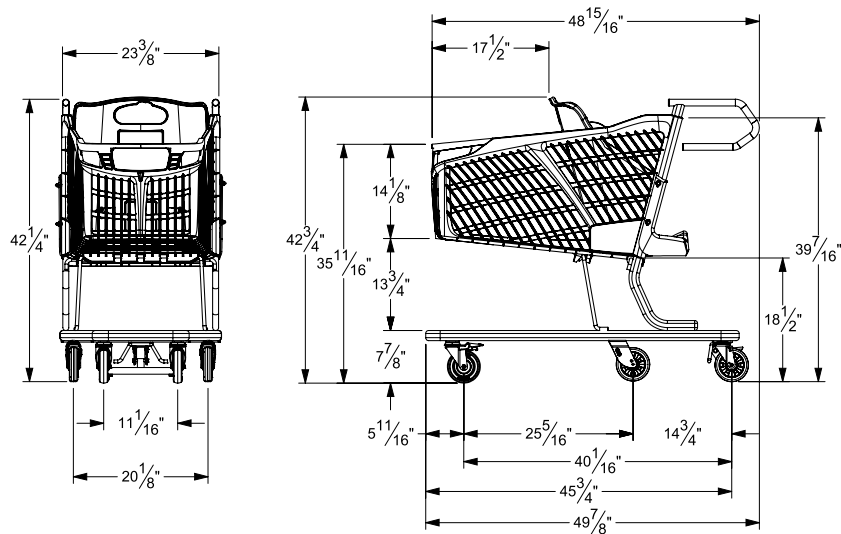

Top Basket Capacity



6,000 in³
98 liters

Weight



53.5 lbs
24.3 kg

Occupant Capacity



35–250 lbs
15.9–113.4 kg

Turning Radius



34.5 in
87.6 cm

Available Basket Colors



Custom colors available. Call for details.

Optional Front Cup Holder



Store Brand Logo Available*



*Store brand logo available with additional set-up logo fee, printed only in white.

Fixed Handle Design

RIGID HANDLE STRUCTURE

Fixed handles offer a more rigid handle structure.

EASY SEAT ACCESS

Fixed, open handles provide convenient access to the seat.

SAFETY

With the fixed handles of Caroline's Cart, pinch points are avoided.

CLEANLINESS

Handles are easy to wipe and keep clean.



Occupant Seating and Operation Instructions

- 1** Apply front two wheel brakes & rear brake before seating the occupant. Do not step or stand on cart platform.



- 2** Place occupant into seat. Do not stand or step on platform.




- 3** Buckle occupant in cart seat and fasten securely. See seatbelt instructions below.



Secure the chest belt by inserting one end into the other.



Secure the belt between the legs by inserting the two ends of the chest harness into the buckle.

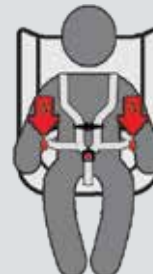

Pull the red loops for a snug fit.

- 4** Release front two wheel brakes and rear brake before moving the cart.



- 5** Cart is ready for shopping.





Wanzl worldwide

- Head Office
- Subsidiaries
- Partners

WANZL NORTH AMERICA
700 Technibilt Drive
PO Box 310
Newton, NC 28658

Phone +1 800-351-2278
Fax +1 800-968-8934

info@wanzl.com
www.wanzl.com/NA

GERMANY
Wanzl GmbH & Co. KGaA
Rudolf-Wanzl-Straße 4
89340 Leipheim

Phone +49 (0) 82 21 / 7 29-0
Fax +49 (0) 82 21 / 7 29-1000

info@wanzl.com
www.wanzl.com

Dimensions and specifications are approximate only. Colors are similar to RAL and/or PMS. Designs are subject to changes. Illustrations may show optional equipment and features.
© Wanzl North America 2022
081721a | February 2022